


Setup the Printer IP Address

First, connect one end of the Ethernet cable to the port found on the printer and then connect the other end of the cable to an available port on your router.

If your computer IP address is 192.168.0.24, then you need to modify the printer's IP address to 192.168.0.100, the first three positions digits must be the same, and the last positions digits can be 3~253, but not the same as the local network IP address.

- 1、 You have to connect the printer with a Windows computer by USB.
- 2、 Turn on the printer.
- 3、 Then, open the “Printer TEST” (on the flash disk) to start the IP setting, following the instruction below.

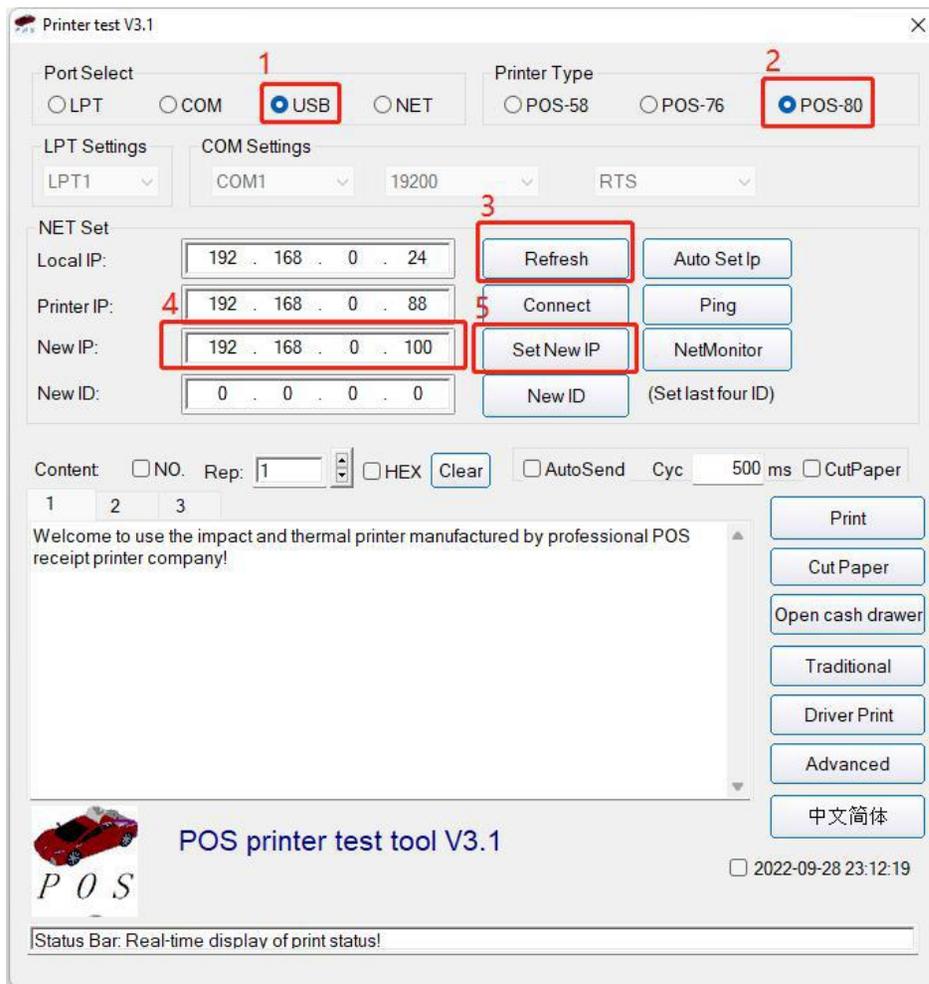

Notice: When you hear a beep from the printer, it means that the IP modification is successful.